



Package: 2.6 Liter Issue Date: February 11, 2011 Revision: March 4, 2011 UN Cert #+BV1425 With 38-439 or 45 mm Neck Finish


NO. / CASE	LIST OF COMPONENTS	Reference	SPEC / PART #
(1) or (4) or (6)	Rexam 38-439 A Stock Acid Closures with Foam Liner	Figures Below	20038485
(1) or (4) or (6)	Menshen Tamper Evident 45 mm Closure DIN45E with PTFE Liner		21451022
(1) or (4) or (6)	2.6 Liter Bottle with 38-439 Neck Finish		815121
(1) or (4) or (6)	2.6 Liter Bottle with 45 mm Neck Finish		815171
(1)	ECT61 Doublewall, B/C flute, RSC Carton	Figures Below	
(1) Roll	2" Clear Pressure Sensitive Tape (Scotch 3M Packaging Tape)	Figures Below	
Adhesive	H.B Fuller Hot Melt Adhesive PHC-9200	Figures Below	


PACKAGING CONFIGURATIONS:	Case Sealing Method
Configuration : One, Four or Six 2.6L Bottles/reshipper carton	Top: 2" Clear Pressure Sensitive Tape Bottom: May be Glued or Taped

ASSEMBLY INSTRUCTIONS:


Note: Refer to component list above. Examine all parts for defects. Once you have determined that this packaging is free from defects then follow these instructions for package assembly.

1. Apply threaded closure to bottle with an application torque of 35 to 50 in-lbs using an appropriate closing tool.
2. For preassembled carton, place four (4) bottles in carton with the bottle closures facing upward.
3. Tape the top flaps closed with 2" clear pressure sensitive tape. Center the tape over the middle seam formed by the flaps being folded together. The length of the tape should be such that there is a 2" extension on each end.
4. For flat carton, fold in two opposite bottom flaps of carton. Then fold in remaining two adjacent bottom flaps making sure that the exposed flaps display the Box Maker's Certificate or the Guarantee Stamp.
5. Tape the bottom flaps closed with 2" clear pressure sensitive tape. Center the tape over the middle seam formed by the flaps being folded together. The length of the tape should be such that there is a 2" extension on each end.
6. Then place four (4) bottles in the carton with the bottle closures facing upward.
7. Tape the top flaps closed with 2" clear pressure sensitive tape. Center the tape over the middle seam formed by the flaps being folded together. The length of the tape should be such that there is a 2" extension on each end.
8. Apply product labels and DOT hazard warning labels as required by customer work order instructions. Do not cover up any UN markings or DOT Hazard labels with tape.

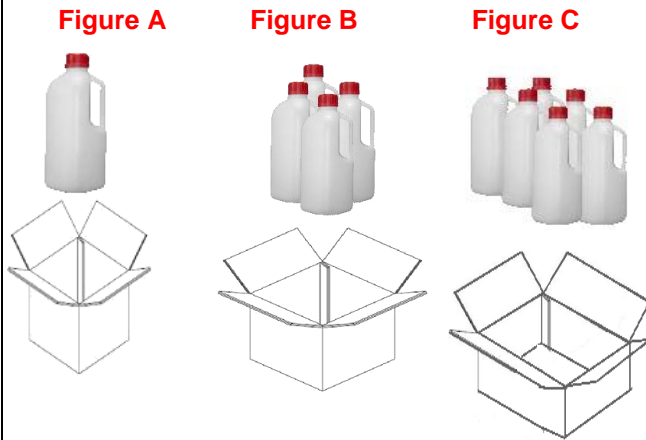

 **4G/Y5.3/S/**** **USA+BV1425** **Figure A UN Marking**

 **4G/Y21.0/S/**** **USA+BV1425** **Figure B UN Marking**

 **4G/Y31.5/S/**** **USA+BV1425** **Figure C UN Marking**

** (Year of Manufacture)